


Number	Name
A01	M4x14 bolt
A02	Ignition coil
A03	Coil
A04	M8 nut
A05	Fly wheel
A06	Oil seal
A07	Left crankcase
A08	Bearing
A09	Gasket crankcase
A10	Pin 3x8
A11	Crankshaft
A12	Key
A13	Washer
A14	Needle bearing
A15	Piston pin
A16	Piston pin
A17	Piston
A18	Piston ring
A19	Gasket cylinder
A20	Right crankcase
A21	Guide
A22	M5x30 bolt
A23	Retainer ring
A24	Oil seal
A25	Oil filter
A26	Oil filter bracket
A27	Oil pipe joint
A28	Oil pipe
A29	Nozzle

Number	Name
A30	Oil nozzle
A31	Oil pump
A32	Oil pump cover
A33	M4x12 bolt
A34	Gasket worm
A35	Worm
A36	Needle bearing
A37	Clutch drum
A38	Gasket clutch
A39	Clutch assy
A40	M5x16 bolt
A41	Bustproof plate
A42	Bracket
A43	ST5x16 bolt
A44	M4x8 bolt
A45	Plate
A46	Screw M8x42
A47	M4x70 bolt
A48	Air filter bracket
A49	Intake manifold
A50	Throttle pull rod
A51	Carburetor
A52	Pipe
A53	Gasket carburetor
A54	Insulator
A55	Gasket insulator
A56	Spark plug
A57	M5x20 bolt
A58	Cylinder

Number	Name
A60	Gasket muffler
A61	Muffler
A62	M5 nut

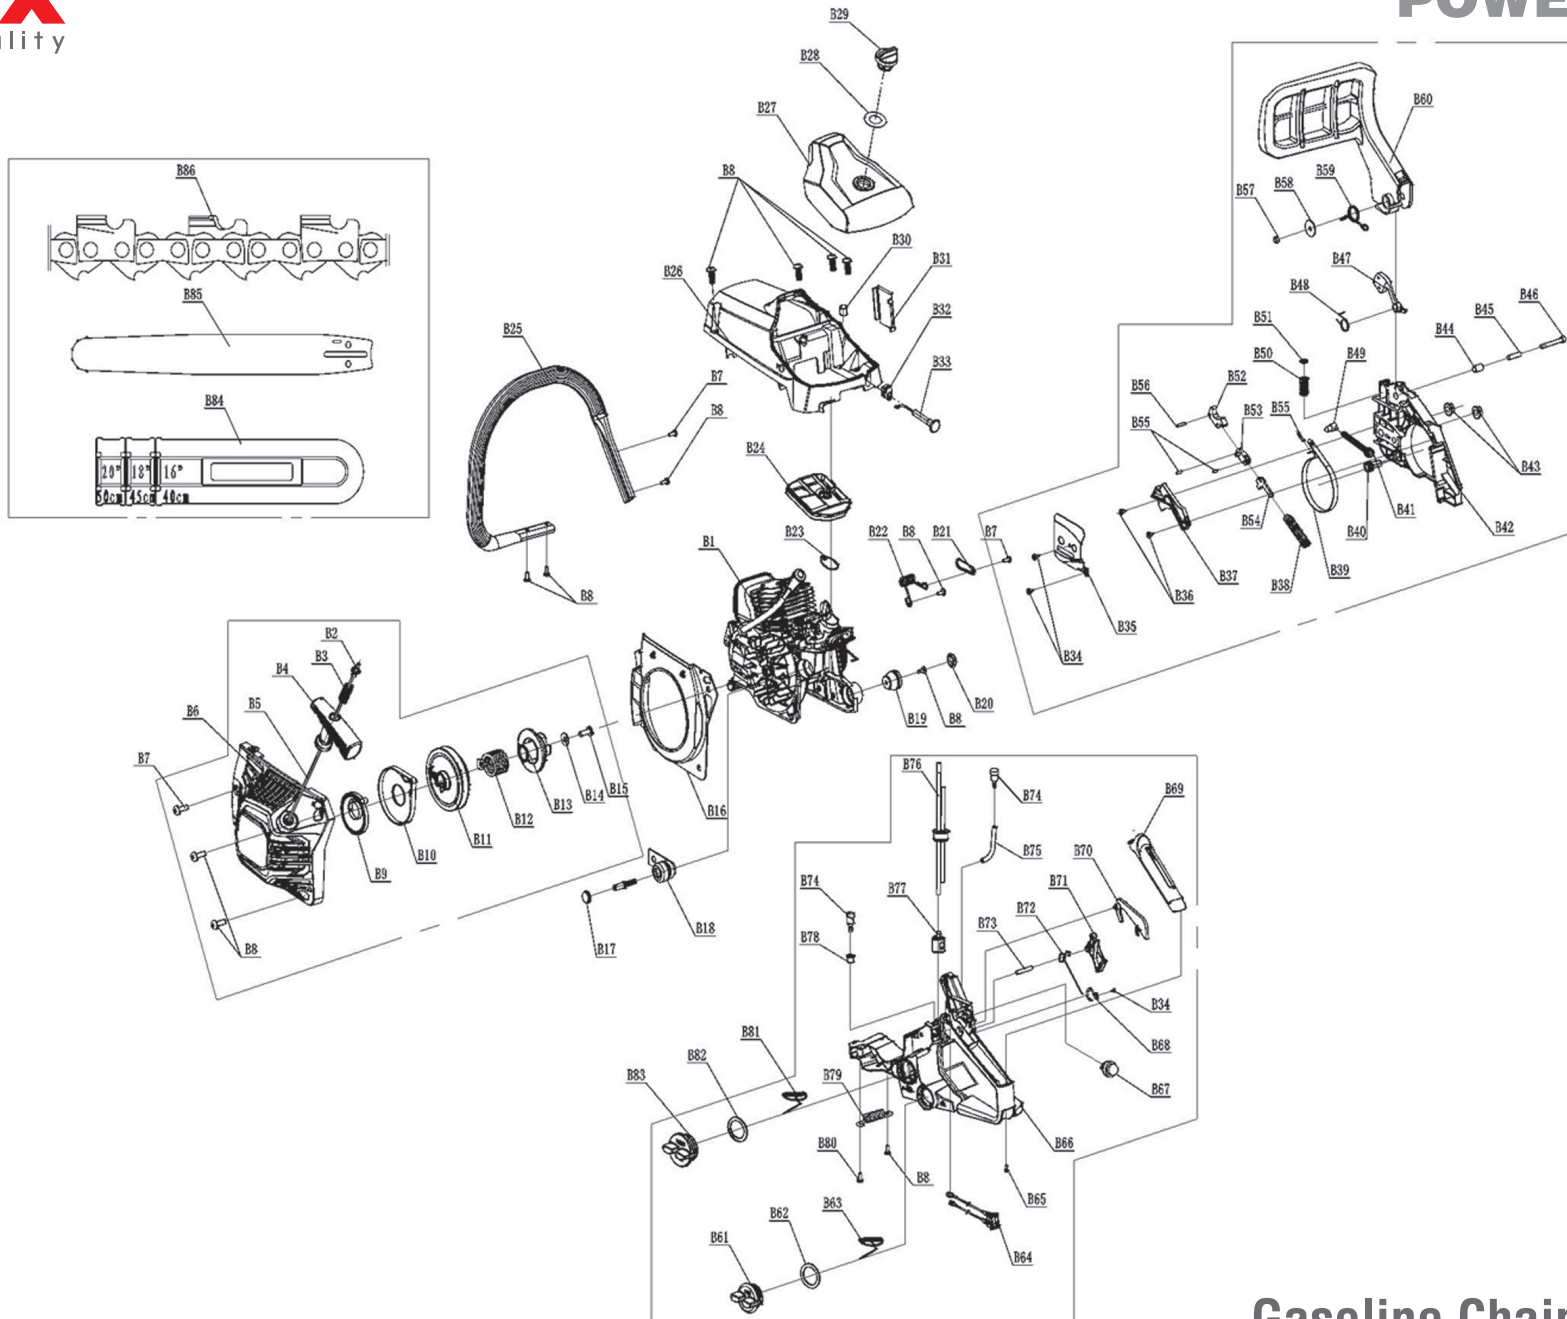

Number	Name
B1	Engin
B2	Buffer spring buckle
B3	knob buffer spring
B4	knob
B5	Rope
B6	Cover
B7	Bolt ST5*18
B8	Bolt ST5*16
B9	Spring
B10	Spring kit
B11	Reel
B12	Start spring
B13	Reel
B14	5x14x1.2 gasket
B15	ST5x16 bolt
B16	Cover
B17	Dustproof cover
B18	Right damper
B19	Left damper
B20	Dustproof cover
B21	Handle spring plate
B22	Handle spring
B23	Ail filter washer
B24	Air filter
B25	Handle
B26	Top cover
B27	Air filter cover
B28	Nut rubber gasket
B29	Air filter nut

Number	Name
B30	Air filter anti-vibration
B31	Plate
B32	Throttle anti-vibration
B33	Choke
B34	ST4x8 bolt
B35	Plate
B36	ST4x10 bolt
B37	Brake spring plate
B38	Brake spring
B39	Band
B40	Adjusting screw gear
B41	Adjusting screw
B42	Brake plate
B43	M8 nut
B44	Punck socket
B45	Guard socket
B46	M5x40 bolt
B47	Punch
B48	Punch spring
B49	Adjusting screw pin
B50	Front baffle buffer spring
B51	Buffer spring brankt
B52	Main lever
B53	Vice-lever
B54	Brake lever
B55	Pin 3x19
B56	Pin 3x14
B57	M5 nut
B58	Washer guard

Number	Name
B59	Brake spring
B60	Guard
B61	Oil cap
B62	Gasket oil cap
B63	Oil pat
B64	Switch
B65	Bolt
B66	Fuel tank
B67	Oil bubble
B68	Oil ilter spring
B69	Rubber handle sover
B70	Rrigger control
B71	Rrigger
B72	Rrigger torsion spring
B73	Pin 5x25
B74	Balancer
B75	Oil pipe
B76	Fuel pipe
B77	Fuel filter
B78	Balancer
B79	Base tension spring
B80	M5+12 bolt
B81	Oil pat
B82	Gasket fuel tank
B83	Cover
B84	Bar cover
B85	Par
B86	Chain