



**2802**

**Demolition Hammer 1750W**

Number	Name
1	Stop pin
2	Circlip 16
3	Grip slipper
4	Spring16.5x1.8x18
5	Locking Sleeve
6	O-Ring 57.5x2
7	Anti-vibration Rubber Ring51.3x24.5x16
8	Anti-vibration Washer 51.4x24.2x7
9	O-Ring 50.5x3.5
10	Steel Sleeve
11	Second striker
12	X-Ring 35.7x4.2
13	O-Ring 35.5x4
14	Anti-vibration Washer 66x30.5x7
15	Anti-vibration Rubber Ring 66.7x36x15
16	Locking circle
17	Cylinder case
18	Screw M10x45-ZT
19	O-Ring 55x1.5
20	Cylinder
21	O-Ring 42x5.3
22	Ram
23	Piston pin 12x43
24	Piston
25	O-Ring 44.4x2.8
26	Needle Bearing NK1616
27	Connecting rod
28	O-Ring 65x2
29	Screw M10x45-ZT
30	Screw M6x30
31	Upper cover
32	Air Guide Plate
33	Flat Pin 6x12
34	Circlip 17

Number	Name
35	Big gear
36	Bearing 6203DD
37	Seal
38	Middle Shaft
39	Needle Bearing K142012
40	Washer 26x14x1
41	First&Scnd Gear
42	Crank shaft case
43	Circlip 40
44	Bearing 6304-RS
45	Crank shaft
46	O-Ring 89x3
47	Grease window seat
48	Screw M5x20
49	Felt Column
50	Seal 57
51	Inner grease cap
52	Self-tapping Screw ST4.2x16
53	Seal washer
54	Outer grease cap
55	Bearing 6302VV
56	Washer 35x15x0.5
57	Rotor
58	Self-tapping Screw ST4.8x67
59	Stator
60	Motor housing
61	Brush holder
62	Carbon brushes set
63	Insert plate
64	Bearing sleeve
65	Bearing 6200DD
66	Bearing Clamp
67	Air Guider
68	Fan

Number	Name
69	Inductance
70	Lower cover
71	Screw M6x45
72	Controller
73	Capacitance
74	Wiring board
75	Self-tapping Screw ST4.0x16
76	Switch
77	Neon cover
78	Cord Press Plate
79	Cord Sheath
80	Self-tapping Screw ST5.5x32
81	Washer 15x5.5x1.5
82	Handle seat
83	Spring 11x1.5x46
84	Upper Anti-vibration Coat
85	Lower Anti-vibration Coat
86	Handle
87	Self-tapping Screw ST4.8x25
88	Handle cap
89	Cord
90	Oil slinger
91	Wiring Terminal
92	O-Ring 42x1.5
93	Slot
94	Screw M4x16
95	NutM4x12
101	Bolt M8x140
102	Clamping seat 1
103	Fixing Piece
104	Clollar
105	Clamping seat 2
106	Star knob
107	Auxiliary handle