



Number	Name
01	REAR HOUSING
02	TAPPING SCREW
03	STABLE POWER SPEED ADJUSTING ADAPTOR
04	"CROSS" TAPPING SCREW ST4.2*16
05	BEARING BASE
06	BRUSH HOLDER
07	CARBON BRUSH
08	BRUSH HOLDER CAP
09	ADJUSTING KNOB
10	CORD
11	CORD GUARD
12	NYLON NUT
13	SWITCH COVER
14	TAPPING SCREW
15	SWITCH
16	STRAIN RELIEF
17	TAPPING SCREW
18	MOTOR HOUSING
19	STATOR
20	BAFFLE PLATE
21	TAPPING SCREW
22	BALL BEARING 6000-2S
23	AMATURE
24	PH. SCREW
25	BEARING RETAINING
26	BALL BEARING 6004-2RS
27	QUICK FEED SCREW
28	QUICK FEED COPPER NUT
29	SMALL COMPRESSION SPRING
30	THREE ANGLE COVER
31	PH. SCREW
32	LEFT DOWN HANDLE
32	LEFT UP HANDLE
33	RIGHT UP HANDLE
33	RIGHT DOWN HANDLE
34	STEP STEEL HARNESS
35	HEAD CASE
36	COLUMN STEEL HARNESS
37	HOOK SPRING
38	TIGHTEN SCREW
39	LOCKED WRENCH
40	HEX SCREW;
41	SELF-LOCK SPRING
42	SELF-LOCK PIN
43	INNER RETAINING RING
44	SELF-LOCK PIN CAP
45/46	COLLET NUT
47	TAPPING SCREW
48	THREAD POLE

Number	Name
49	LONG COMPRESSURE SPRING
50	LEFT POLE
51	WINGED BOLT
52	ADJUSTING SCREW
53	T SHAPED PIN
54	FLAT HEAD SCREW
55	HEX SCREW
56	LIMITED BASE SPRING
57	LIMITED BASE
58	RIVET
59	WINGED BOLT
60	WINGED SCREW
61	WINGED BOLT SPRING
62	OPEN SPRING PIN
63	BASE
64	PLASTIC DISC
65	PH. SCREW
66	"CROSS" GROOVE HEAD SCREW
67	POSITIONNG POLE
68	MOTOR BRACKET
69	OPENING SPRING PIN
70	
71	HEX SCREW
72	NUT
73	HEX SCREW
74	BEARING BUSH
75	INSULATION SLEEVE
76	CONNECTOR BUTTON
77	CONNECTOR BUTTON
78	COLUMN PIN
79	RUBBLE PIN
80	CONNECTOR BLOCK
81	SPRING WASHER
82	FLAT WASHER
83	TAPPING SCREW
84	LOCK LEVER SLEEVE
85	SPRING WASHER
86	TRIMMER GUIDE
87	COLLET 6MM
88	COLLET 8MM
89	STRAIGHT GUIDE
90	TRANSPARENT COVER
91	SMALL WRENCH
92	TEMPLATE GUIDE
93	DUSTPROOF COVER
94	ROLLER BLACKET
95	BIG WRENCH
96	SCREW M4*8