

# Ronix<sup>®</sup>


Premium Quality

## RATCHET STEEL JACK 1.5 T, 3T, 5T

**RH-4946**

**RH-4947**

**RH-4948**

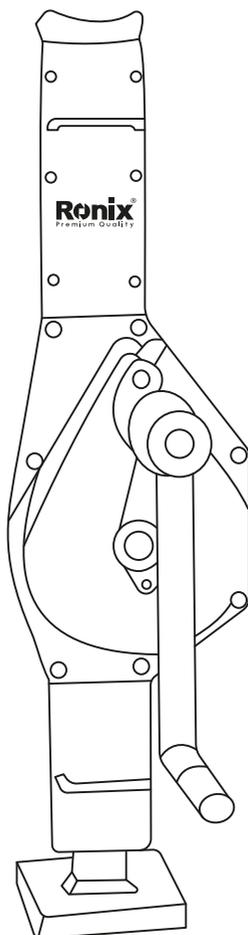

[www.ronix.ir](http://www.ronix.ir)






## TECHNICAL SPECIFICATION

Model	RH-4946	RH-4947	RH-4948
Load Capacity	1500Kg	3000Kg	5000Kg
Maximum Lifting Height	600mm	730mm	730mm
Minimum Lifting Height	60mm	70mm	80mm
Stroke	300mm	350 mm	350mm
Material	Q235	Q235	Q235
Net Weight	13.5Kg	21.2Kg	28.5Kg
Gross Weight	16Kg	22Kg	30Kg
Included	No accessories	No accessories	No accessories

## PART LIST

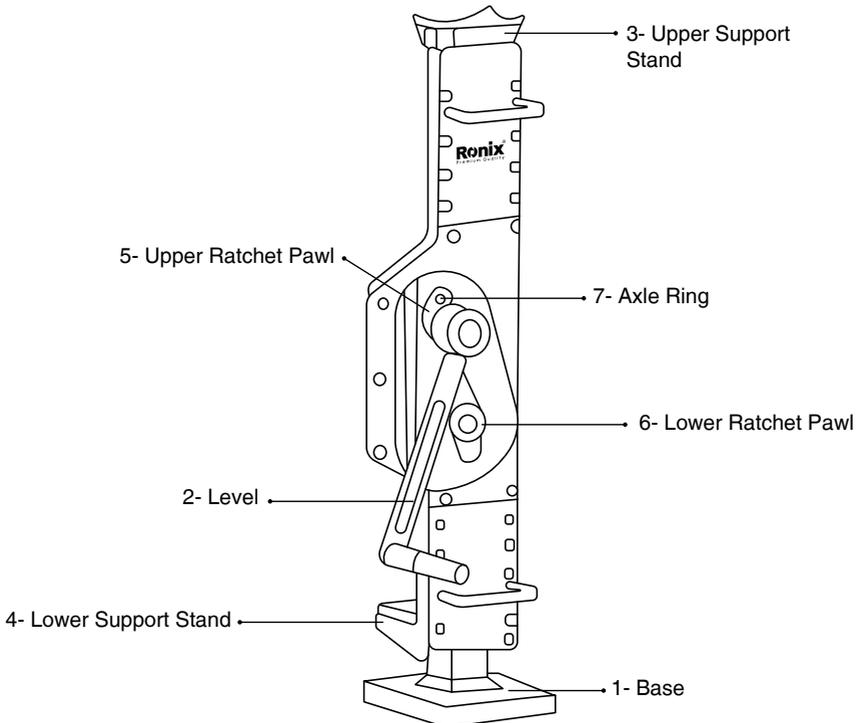

## **INSTRUCTION MANUAL**

The steel jack is designed by mechanical transmission principle. It is one of the best lift tools used in repairing and supporting and etc. The lifting or lowering speed is controllable. Moreover, it overcomes the shortcoming of the common hydraulic jacks whose lowering height and speed is out of control when oil leaking.

The top-quality all steel structure makes it safe and durable. The compact design with collapsible lever offers easy operation and simple maintenance. It has two applicable support stands. The lifting range is much bigger.

## **OPERATION GUIDE**

Put the steel jack on even places. Then place the goods on the Lower Support Stand (4) or the Upper Support Stand (3). Shake the Level (2) clockwise to lift the goods. Vice versa, the goods are lowered down

## **ATTENTION**

- A- Do not exceed the rated capacity. Overload is forbidden.
- b- Before operation, please check the flexibility of the Ratchet Pawls (5),(6)
- C- Please be sure the jack is on complete balance when operating. Do not put it on beveled, arc or uneven surfaces. The jack must be placed on hard plain grounds.
- D- Before lifting, please be sure the Support Stand (4) and (3) supports the goods completely.
- E- When several jacks are used at the same time, please be sure of the same lift or down. The whole operation course should be directed.
- F- It's forbidden putting any parts of the body under the lifted goods.
- G- If working force is abnormal in operation, please stop working immediately to inspect all related transmit components.
- H- Lubricate parts applicably regularly.
- I- The Upper Support Stand (3) should be on bottom position when the jack is not used.

سهولت در کنترل جک در زمان استفاده آن را نسبت به نوع هیدرولیکی که عموماً با مشکل نشتی روغن هیدرولیک روبرو هستند متمایز کرده است. چهارچوب جک از استیل ساخته شده و کاملاً ایمن و بادوام می باشد. دسته جک تاشو بوده و همچنین تعمیر و نگهداری جک بسیار ساده می باشد. دارای کورس حرکتی بالا می باشد.

## ■ راهنمای کاربری

پایه جک را در روی زمین ثابت نمایید سپس بار مورد نظر روی کفه نشیمنگاه پایین ۴ یا بالا ۳ قرار دهید. حال با چرخش دسته شماره ۲ در جهت عقربه های ساعت کفه ها شروع با بالا رفتن و در نتیجه جابجایی بار روی آن می شود.

### ⚠ توجه

- ۱- از بلند کردن بار سنگین تر از ظرفیت جک خودداری نمایید.
- ۲- ضامن های قفل کن ۵ و ۶ را قبل از استفاده جک بررسی نمایید و از صحت عملکرد آنها اطمینان حاصل فرمایید.
- ۳- از تعادل و استحکام سطح زیر پایه جک در زمان استفاده اطمینان حاصل فرمایید و از قرار دادن روی سطح نامسطح خودداری فرمایید.
- ۴- قبل از بلند کردن بار از قرار گرفتن ایمن بار روی نشیمنگاه ۳ و ۴ اطمینان حاصل فرمایید.
- ۵- در صورت استفاده همزمان چندین جک بصورت همزمان عملیات بالا بردن و پایین آوردن بار بصورت همزمان و در جهت یکسان انجام بگیرد.
- ۶- از قرار گرفتن روی بار در زمان بالا یا پایین آوردن جک خودداری فرمایید.
- ۷- در صورت عدم عملکرد صحیح جک تا رفع مشکل از آن استفاده نمایید.
- ۸- بصورت دوره ای قطعات متحرک روانکاری گردد.
- ۹- کفه نشیمنگاه بالا شماره ۳ در زمانی که از آن استفاده نمی کنید در پایین ترین حالت قرار دهید.

## خدمات پس از فروش


### ⚠ توجه!

توجه داشته باشید که هیچ کدام از اجزای داخلی این ابزار احتیاج به تعمیرات اضافه یا دستکاری جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه دستکاری یا ارائه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه ایراد، سریعاً با نزدیک ترین مرکز سرویس مجاز تماس حاصل نمایید تا از خدمات سریع و دقیق **رونیکس سرویس** استفاده نمایید. برای اطلاع از عاملیت های مجاز **رونیکس سرویس** با تلفن ۰۲۱-۶۴۹۷-۰۲۱ تماس حاصل نمائید.

## مشخصات فنی

RH-4948	RH-4947	RH-4946	مدل
۵۰۰۰ کیلوگرم	۳۰۰۰ کیلوگرم	۱۵۰۰ کیلوگرم	ظرفیت بارگیری
۷۳۰ میلی متر	۷۳۰ میلی متر	۶۰۰ میلی متر	بیشینه ارتفاع بارگیری
۸۰ میلی متر	۷۰ میلی متر	۶۰ میلی متر	کمینه ارتفاع بارگیری
۳۵۰ میلی متر	۳۵۰ میلی متر	۳۰۰ میلی متر	طول کورس
Q۲۳۵	Q۲۳۵	Q۲۳۵	جنس
۲۸٫۵ کیلوگرم	۲۱٫۲ کیلوگرم	۱۳٫۵ کیلوگرم	وزن خالص
۳۰ کیلوگرم	۲۲ کیلوگرم	۱۶ کیلوگرم	وزن ناخالص
ندارد	ندارد	ندارد	متعلقات

## اجزا و قطعات

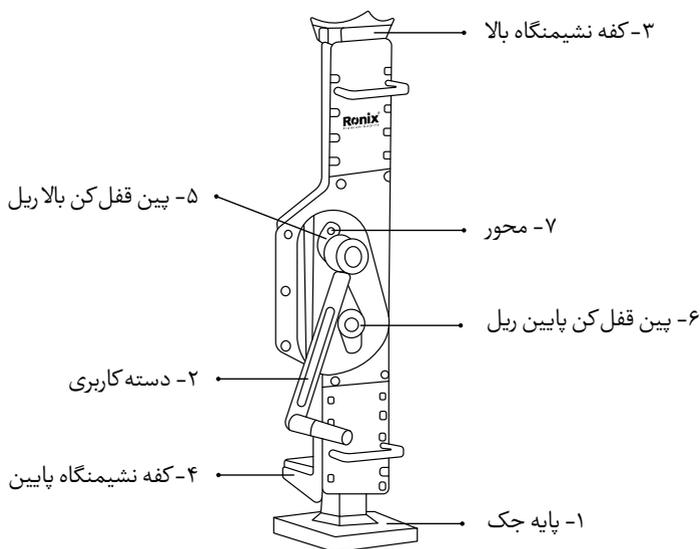

## دفترچه راهنما

جک استیل بر اساس تبدیل نیروی مکانیکی چرخشی به خطی طراحی گردیده است. سادگی و



# رونیکس®


آخرین ابزاری که می‌خرید!

جک دنده‌ای ۱،۵ تن، ۳ تن، ۵ تن

**RH-4946**

**RH-4947**

**RH-4948**

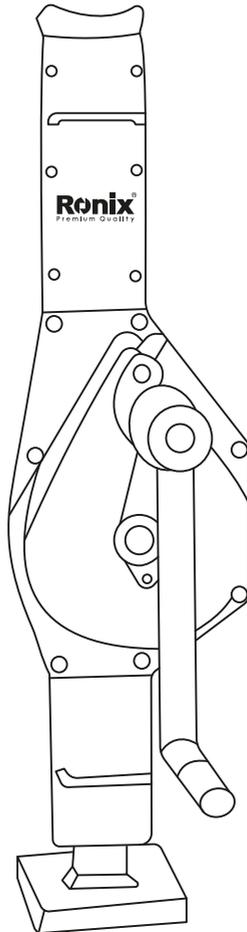

[www.ronix.ir](http://www.ronix.ir)